



P109 PERDE DETAMI




P110 PERDE DETAMI




P111 PERDE DETAMI




P112 PERDE DETAMI




P113 PERDE DETAMI

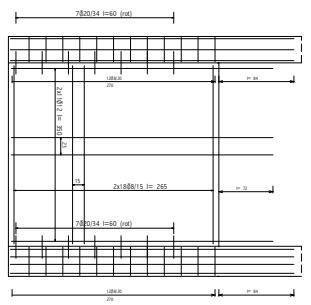


P114 PERDE DETAMI

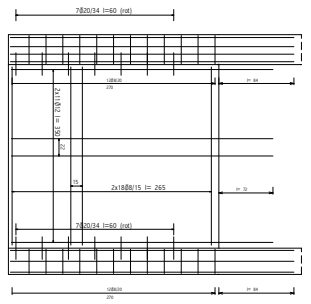


P115 PERDE DETAMI

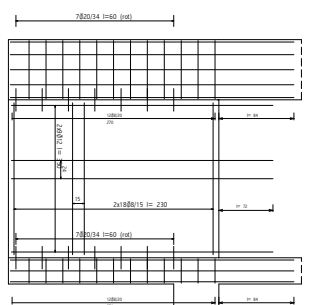


P116 PERDE DETAMI

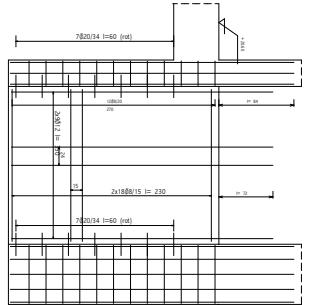


P117 PERDE DETAMI

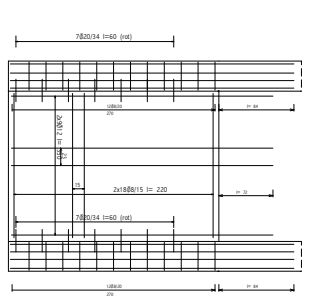


P118 PERDE DETAMI

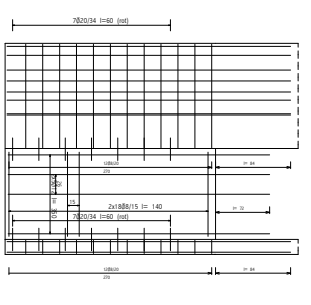


P119 PERDE DETAMI

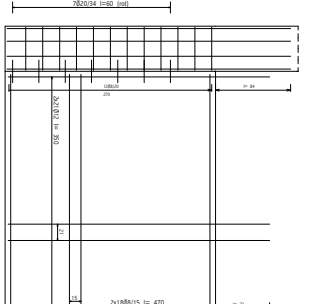


P120 PERDE DETAMI

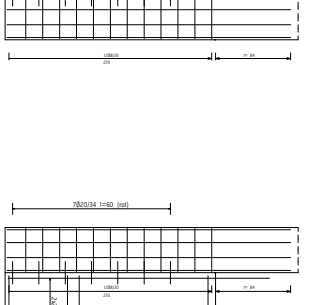


P121 PERDE DETAMI

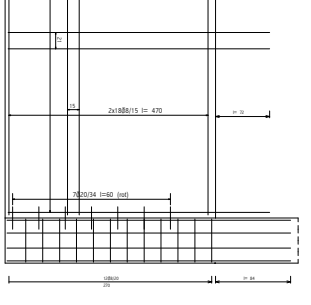


P122 PERDE DETAMI

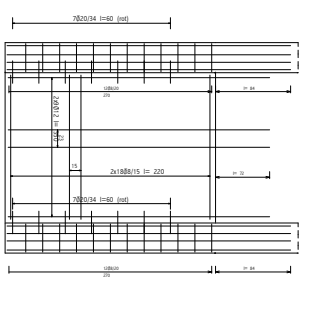


P123 PERDE DETAMI

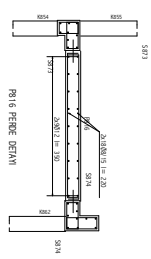


P116 PERDE DETAMI

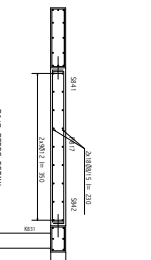


P117 PERDE DETAMI

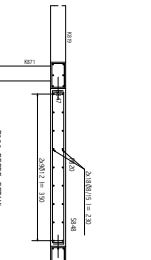


P120 PERDE DETAMI

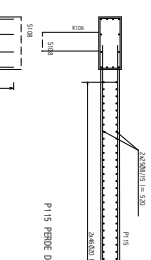


P115 PERDE DETAMI

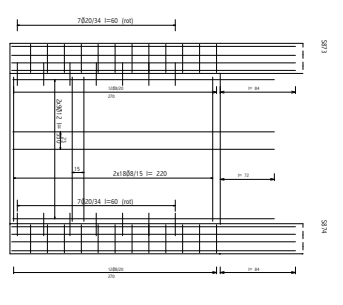


P116 PERDE DETAMI

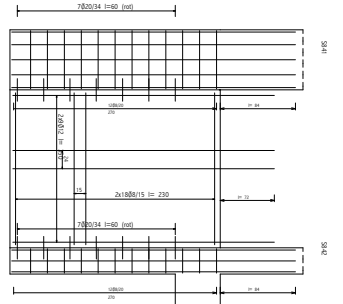


P117 PERDE DETAMI

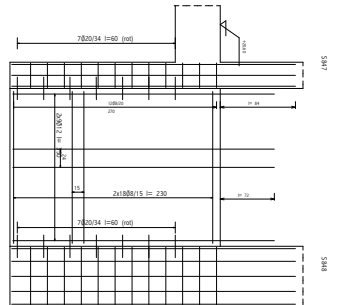

P120 PERDE DETAMI

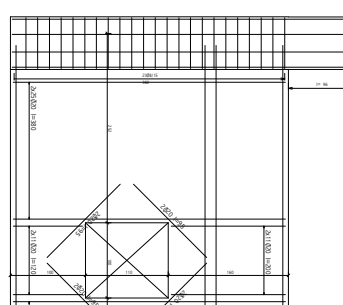

P115 PERDE DETAMI



P115 PERDE DETAMI